



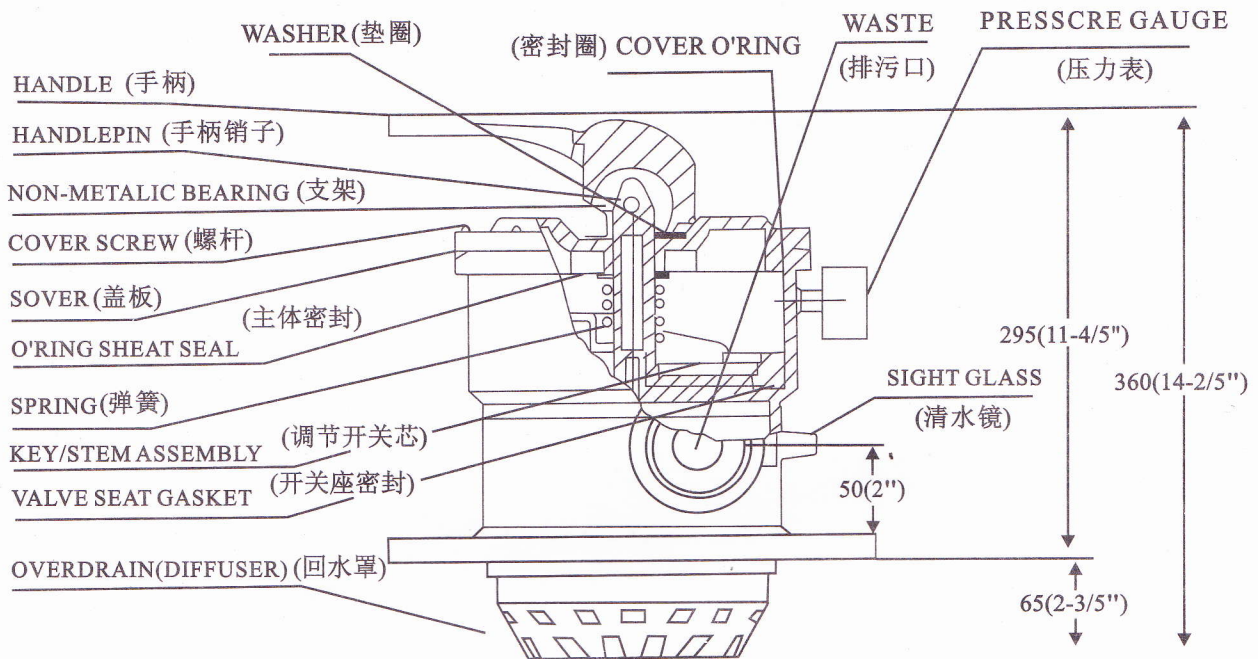


CROSS SECTION VIEW

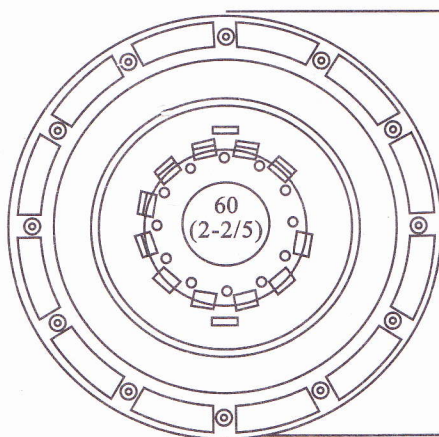

BOTTOM VIEW
(仰视图)

270(10-4/5")

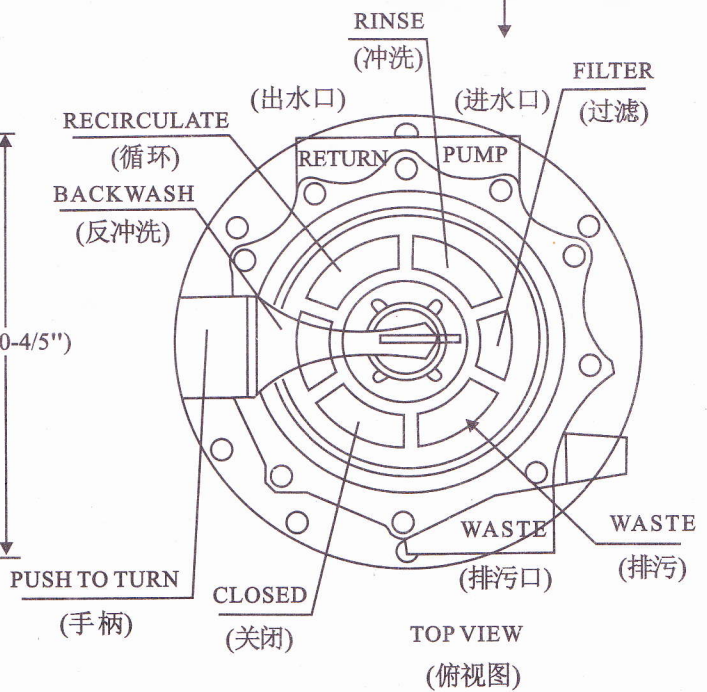


TOP VIEW
(俯视图)


FUNCTIONS OF VALVE POSITIONS

Valve Position	Function
FILTER 过滤	Normal Filtration and Vacuuming 正常过滤
BACK WASH 反冲洗	Cleaning Filter by reversing the flow 排除过滤器内的污物
RINSE 冲洗	Used after backwash to flush valve 反冲洗后, 排除在水管内的污物
WASTE 排污	By-passes filter, used from vacuuming waster or lowering water level 不经过滤, 直接排水
RECIRCULATE 循环	By-passes filter for circulating water to pool 循环, 不经过滤器
CLOSED 关闭	Shuts off all flow to filter or pool 关闭


FILTER (过滤)

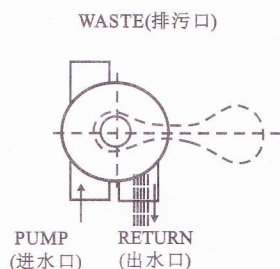


WASTE (排污)

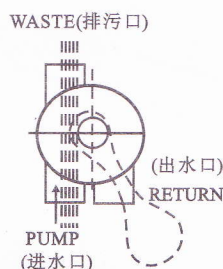


CLOSED (关闭)

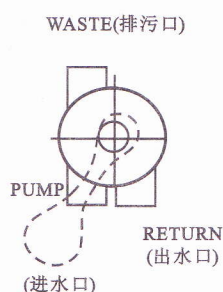


BACKWASH (反冲洗)

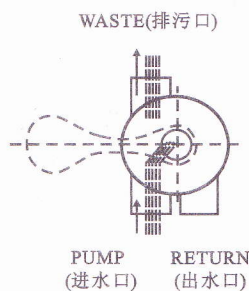

RINSE (冲洗)

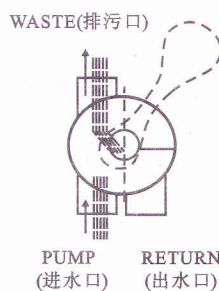

RECIRCULATE (循环)

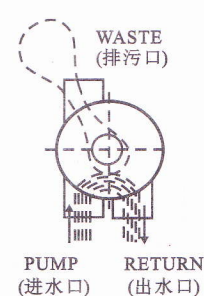

概述 SUMMARIZE:

- 1、压力表显示过滤器内水的压力。

The pressure gauge displays the pressure of water in the filter.

- 2、塑料塞子不要拧得过紧, 一般用聚氟乙烯胶带使其达到良好的密封效果。

Do not tighten the plastic stopper too much. Normally use adhesive tape to seal it well.

- 3、控制开关的维修, 如果必须把开关体或开关体底座密封圈取出的话, 其操作步骤如下:

SERVING THE VALVE-if it becomes necessary to service or gain access to the key or valve seat gasket:

a. 将把手旋至“FILTER”位置: Set handle in Filter position.

b. 取掉螺杆: Remove cover screws.

c. 拿下盖板和开关芯: Lift cover and key assembly out.

安装 To ASSEMBLE:

- d. 放置盖板时, 要将盖板和控制开关主体上的凸缘标记对齐:

Place valve key so that the wedge opening is at port next to the sight glass (handle in filter position).

Flat edge of cover screw lug should align with flat edge of body screw lug.

- e. 安装O型胶圈: Position cover O-ring.

- f. 用螺杆将盖板和控制开关主体连接, 螺杆不要锁得太紧。

Secure assembly to body with cover screws. Tighten cover screws evenly and alternately. Do not over tighten.